
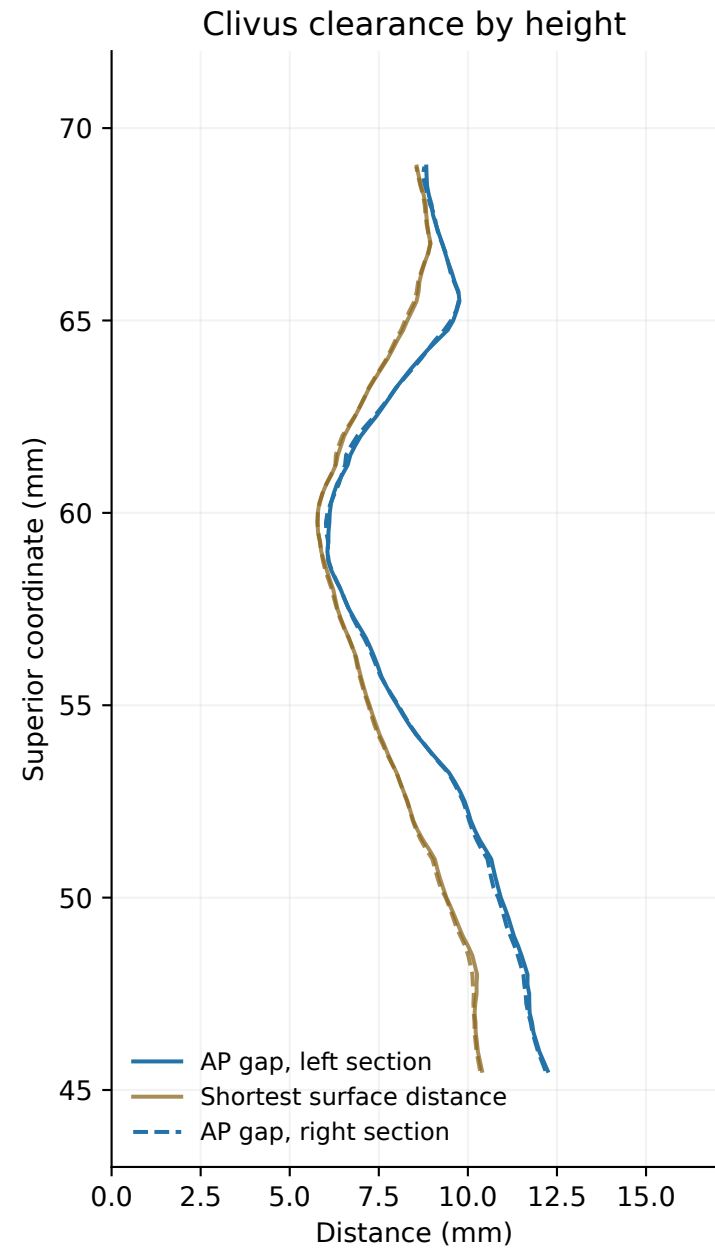


Pons to clivus: current Neurovascular Atlas v0.9.22

Additional ventral pons prominence included

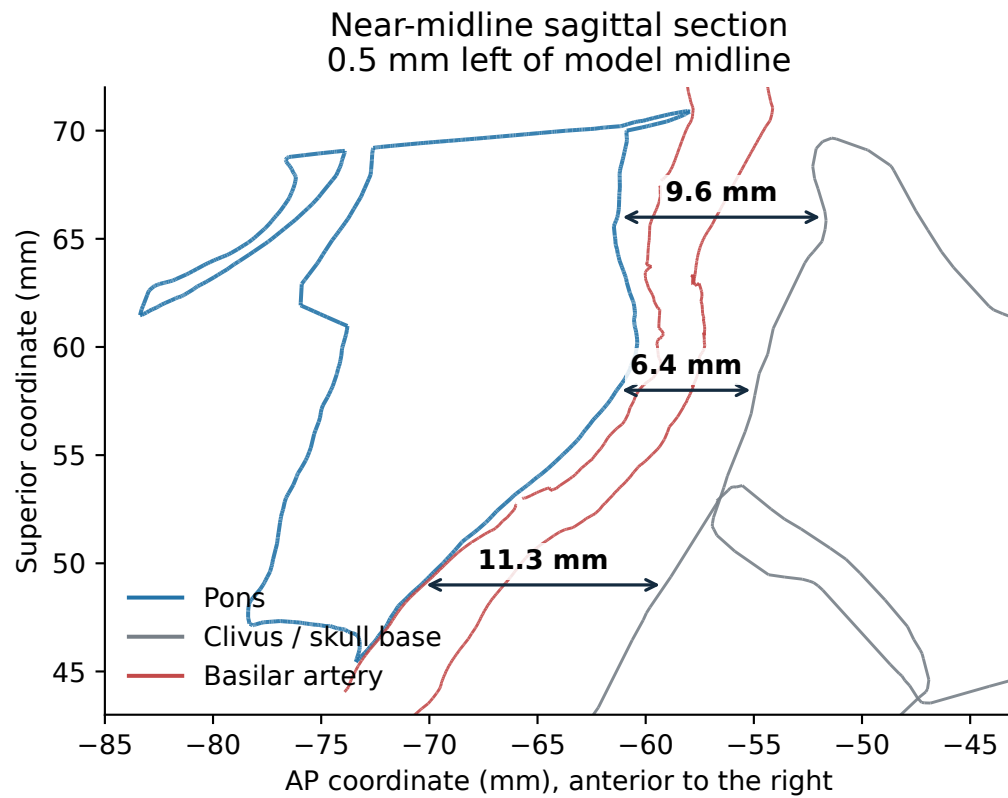

AP arrows measure bone clearance. The basilar artery occupies part of this gap.
 Measurements use actual model triangles; Revised brainstem and vessel surfaces.

Pons to clivus: measurements and method

Current atlas v0.9.22, including the previous advancement of up to 3 mm.
Distances are in millimetres. Includes the additional 1.7 mm pontine shape adjustment.

Pons level	AP gap*	Shortest gap*	AP range
Upper	9.6	8.6	6.9–9.8
Middle	6.4	6.2	6.0–9.6
Lower	11.2	9.8	9.7–12.2

*Mean of paired sections 0.5 mm either side of the model midline.
Representative heights: upper 66 mm, middle 58 mm, lower 49 mm in RAS Z.

Minimum sampled clival surface distance across the central 20 mm: 5.8 mm.

Method:

- Decode the delivered model assets and use their actual triangles.
- Find the anterior pons surface on rays directed along +Y (anterior).
- Measure to the first inner occipital/sphenoid clival surface on that ray.
- Also find the nearest bone triangle to each sampled anterior pons point.
- Include nearest points only when located in the clival region.
- Verify representative pons and clivus ray hits independently with VTK.

Sampling: 190 near-midline points, with 0.25 mm height spacing;
880 wider points over lateral offsets ± 10 mm, with 0.5 mm height spacing.

Interpretation:

The basilar artery and other prepontine structures occupy some of this gap.
These are geometric measurements of a composite atlas, not patient data.
Endpoint margins and the small seam between open hemipons meshes are excluded.
A sampled minimum is not an exhaustive whole-surface collision clearance.